


POST CULTURE PEDALS

BLOODY CAMEL TOE

postculturepedals.com

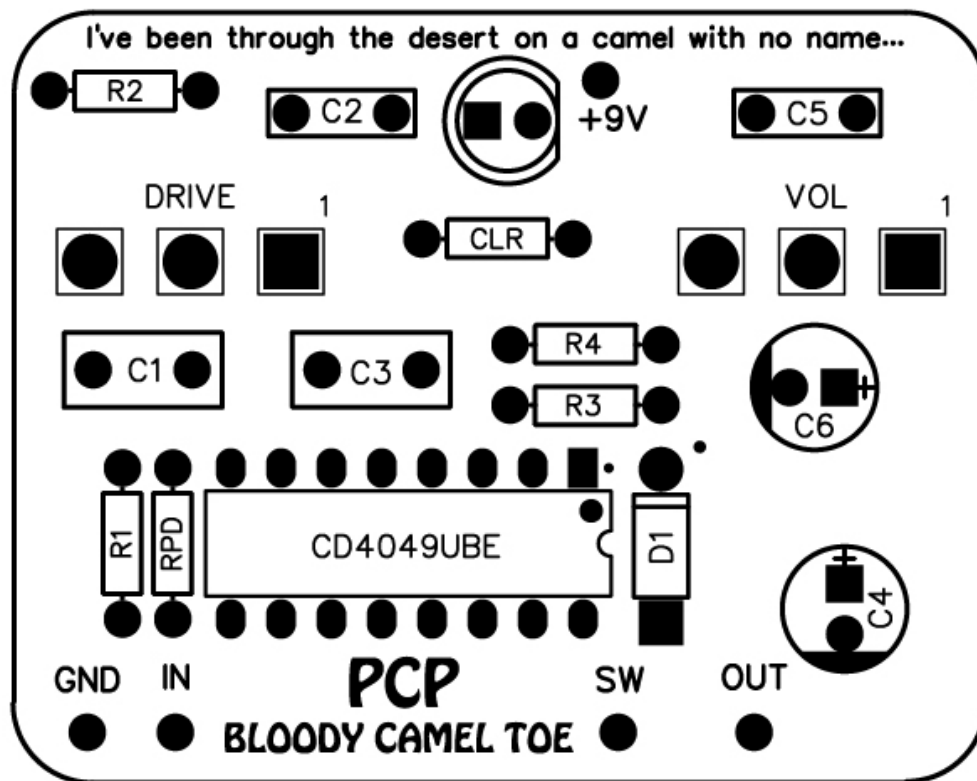

Parts

Resistors:

- 1 1k - R4 (brown, black, black, brown, brown)
- 1 10k - CLR (brown, black, black, red, brown)
- 2 100k - R1, R2 (brown, black, black, orange, brown)
- 2 1meg - RPD, R3 (brown, black, black, yellow, brown)

Capacitors:

- 1 33nf (333) Polyfilm - C3
- 1 68nf (683) Polyfilm - C1
- 1 51p ceramic - C2
- 1 100p ceramic - C5
- 1 10uf electrolytic - C6
- 1 220uf electrolytic - C4

Semiconductors:


- 1 5mm LED
- 1 1N4002 Diode
- 1 CD4049UBE
- 1 16 pin socket

Potentiometers:


- 1 B1M linear Pot - Drive
- 1 A10K log Pot - Vol

Hardware:

- 1 Enclosure
- 1 3PDT Footswitch
- 2 Mono Jacks
- DC jack
- 2 knobs
- LED mount
- Wire

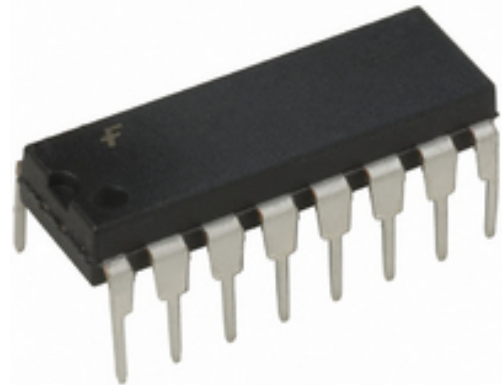

Your IC should have a notch on one end. Install the IC so the notch matches the one printed on the board. If the supplied IC does not have a notch, it will have a small dot on one corner. Install the IC so that dot is on the same end as the notch printed on the board

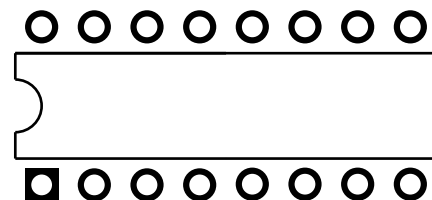

1590B Drill Template

Print at 100%
Compare printed template
with PCB before drilling!

